 





MIL-DTL-38999 Series I, II, III, and IV
Hermetic Class Connectors
Insert Arrangements (IAW MIL-STD-1560)


B




Series I	9-35	9-98	11-2	11-4	11-5	11-35	11-98	11-99
Series II	8-35	8-98	10-2	10-4	10-5	10-35	10-98	10-99
Series III	A35	A98	B2	B4	B5	B35	B98	B99
Series IV	---	---	---	---	B5	B35	B98	B99

 


Series I	13-4	13-8	13-35	13-98
Series II	12-4	12-8	12-35	12-98
Series III	C4	C8	C35	C98
Series IV	C4	---	C35	C98

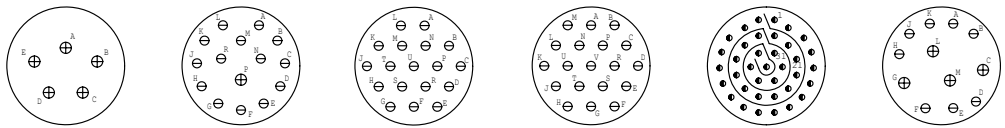

Series I	15-5	15-15	15-18	15-19	15-35	15-97
Series II	14-5	14-15	14-18	14-19	14-35	14-97
Series III	D5	D15	D18	D19	D35	D97
Series IV	D5	---	D18	D19	D35	D97

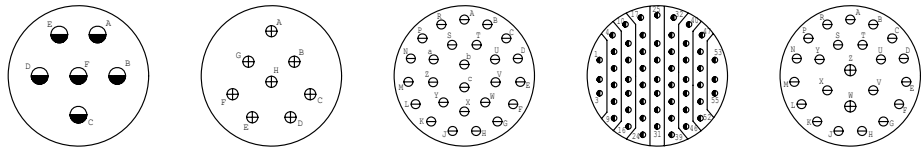

Series I	17-6	17-8	17-26	17-35	17-99
Series II	16-6	16-8	16-26	16-35	16-99
Series III	E6	E8	E26	E35	E99
Series IV	E6	E8	E26	E35	---

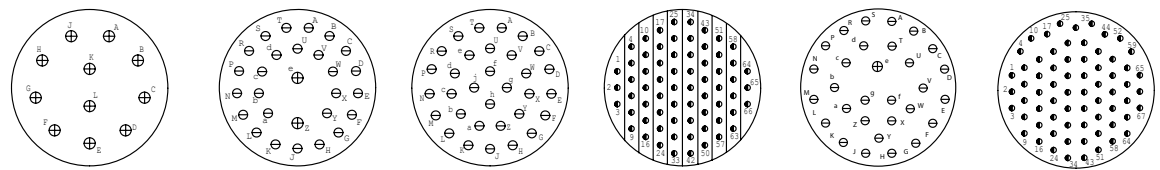

Series I	19-11	19-28	19-32	19-35	19-30	19-45
Series II	18-11	18-28	18-32	18-35	18-30	18-45
Series III	F11	F28	F32	F35	F30	F45
Series IV	F11	---	F32	F35	---	---



MIL-DTL-38999 Series I, II, III, and IV Hermetic Class Connectors Insert Arrangements (IAW MIL-STD-1560)



D38999 QPL
Hermetics

B

Series I	21-11	21-16	21-35	21-41	
Series II	20-11	20-16	20-35	20-41	
Series III, IV	G11, G11	G16, G16	G35, G35	G41, G41	
Series I	21-24	21-25	21-27	21-29	21-39
Series II	20-24	20-25	20-27	--	20-39
Series III, IV	G24, G24	G25, ---	G27, ---	G29, ---	G39, ---
Series I	23-21	23-35	23-53	23-55	23-32
Series II	22-21	22-35	22-53	22-55	22-32
Series III, IV	H21, H21	H35, H35	H53, ---	H55, H55	H32, ---
Series I	23-34	23-36	23-97	23-99	
Series II	22-34	22-36	22-97	22-99	
Series III, IV	H34, ---	H36, ---	H97, ---	H99, ---	
Series I	25-29	25-35	25-61	25-4	
Series II	24-29	24-35	24-61	24-4	
Series III, IV	J29, J29	J35, J35	J61, J61	J4, J4	
Series I	25-43	25-19	25-24	J-11	
Series II	24-43	24-19	24-24	(Series IV Only)	
Series III, IV	J43, J43	J19, J19	J24, J24		

